 


## SETUP GUIDE

### Interface

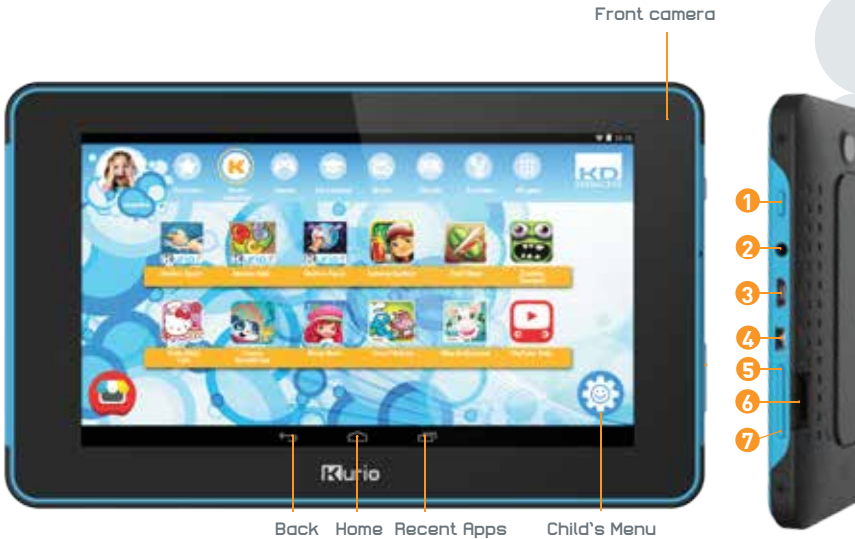

- |                               |                            |                             |                   |
|-------------------------------|----------------------------|-----------------------------|-------------------|
| <b>1</b> Power ON/OFF/STANDBY | <b>3</b> Micro USB/Charger | <b>5</b> Volume +           | <b>7</b> Volume - |
| <b>2</b> Headphone 3.5mm jack | <b>4</b> Micro HDMI        | <b>6</b> Micro SD card Slot |                   |

### IMPORTANT INFORMATION - PLEASE READ BEFORE SETTING UP YOUR KURIO

- The tablet must be set up by an adult to ensure an appropriate level of protection for all users of the device.
- To turn off your Kurio tablet correctly, press the Power button until the pop up message appears on screen, and then select ""Power off"". Avoid switching off the device by pressing and holding the Power button until the unit stops.
- Do not fully discharge the battery (keep at 5% or more). Recharge it to full power regularly to preserve it.
- Password Reset: Tech Support may not be able to retrieve your Parental Area password, so please don't forget to note it in a safe place. In case of a lost password, the tablet may have to be factory reset and all personal data will be lost.
- Please connect your Kurio tablet to Wi-Fi frequently to receive and enjoy the latest upgrades. Updates are pushed to your tablet wirelessly.
- If you encounter any issue with your device, please do not return it to the store. Please review our FAQs & troubleshooting info or contact our tech support team for help at [www.kurioworld.com/support/](http://www.kurioworld.com/support/). You can also contact the tech support team through the Kurio Support App in the Parental Area.

Find more tips and information at [WWW.KURIOWORLD.COM](http://WWW.KURIOWORLD.COM)

# Installation

## Kurio Parental Account Setup

- **Language selection:** Select your language to continue. The language can be changed later from the Android settings.
- **Wi-Fi connection:** Select a Wi-Fi hotspot and connect to Wi-Fi (not mandatory but highly recommended).
- **Date & Time settings:** If connected to Wi-Fi, the date and time will be set automatically. If not, set the correct date and time.
- **Apps & Data restoration:** This screen appears if you already have a Google account on another device. You may want to restore the data and apps you had on that device. If not, choose "Set up as new device".
- **Parental Account Configuration:** Enter your email address and check the Terms of Use.
- **Security password:** To protect your parental account, you must set up a password (Text, Pin code or visual pattern). Select an option, validate it and continue.
- **Restore preloads content:** This pop-up is displayed only after a factory reset: it allows you to download and install all the original apps. Skip this screen if you don't want to restore the preloads.



## Create a Kurio Child Profile

- **Create 1st child profile**  
You can create your first child's profile now or choose to create it later. Continue to access Kurio Genius.
- **Child profile Configuration**  
Enter name, date of birth (important) and select the gender of your child. Validate.



# Kurio Genius Overview


The Kurio Genius Parental app is pre-installed on the main screen of the parental profile. It will give you quick access to the main settings and features of the Kurio System:

## Main menu

From this screen, you can see the current settings for your child's profile. You can create a new profile, delete or manage an existing one and access the parental account settings. You also have access to all the submenus to set specific parameters of parental control by pressing their title.



- **Child profile's information:** You can modify your child profile's name, birthday and gender at the top of the screen.
- **Application Management:** To allow or block each application installed on the tablet.
- **Time Control:** To configure hours of use per day, play time and session time.
- **Web Access:** To allow, block or manage Internet access, use web filtering or web list.
- **Profile Settings:** To allow or block USB access and to activate or disable Google Account for the child profile.

 From this icon, you can access your parental account (email address, name, password...) and access Customer Care (FAQ, contact us, support...) where you can find information such as the Serial Number and the System version.

## Application Management

- **Authorize app auto:** Turn off this option if you don't want to authorize automatically all the apps you install on the tablet to the child profile.
- **Application Management menu:**
  - Select apps from the list to authorize or to block to the child profile you are configuring.
  - Move the apps of your choice to the existing categories (by pressing their icon at the bottom of the screen after selecting them) to find them categorized in the child's profile.



You can import a list from another profile which you already configured to apply the same settings of authorization of apps or reset the list to default authorizations.

## Time Control

Thanks to the Time Control menu, you can setup different time parameters to control your child's use of his apps. You may limit the access to his apps at specific times of the day and for a specific duration.

- **Access to category 'Educational':**

Turn on this option to give access to the apps in the Educational category even while the access to the rest is restricted by the Time Control.
- **Time Control menu:**
  - **Hours of use:** Time slot of possible use per day. Choose the time slot by dragging the cursors to define the hours within which the child will be able to access his apps.
  - **Play time:** Maximum duration of use per day.
  - **Session length:** Maximum duration of consecutive use.
  - **Pause length:** Minimum break time between each session.

 


You can do this for the whole week but also set different settings for specific days using the tabs at the top of the screen.

## Web Access

Our advanced filtering system allows children to access thousands of websites safely, by blocking websites that may contain inappropriate content.

- Turn off Web Access from the Kurio Genius Main Menu to block all access to the Web.
- Turn on the Web filtering to use predefined filters of websites according to the age of your child. (Press the Web Access title to access more options.)
- Turn on the Web list to use your personalized list of websites. (Press the Web Access title to access more options.)

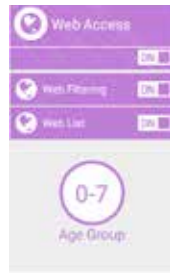

## Web Access menu

 
- **Web filtering:** Use the automatic web filtering list adjusted to your child's age by default or turn on custom parameters to disable or activate the filter on specific categories of your choice. You can press "Set to current age" at any time to reset the list to default.
- **Web list:** Create and manage your own list of websites by adding URLs to allow or to block. You can also let Kurio Genius filter automatically the added websites according to this profile's age by pressing the bulb icon. The green shield shows the filter is active (will block access to the website), while the red shield represents the absence of filter.



The list is common to all profiles but you can import a list from another profile to apply the same settings of filtering.

## Profile settings

- **USB Access:** Turns on the USB port when the device is connected to a PC or from a USB host, such as an external hard drive.
- **Google Account:** Allows your child to setup a Google account and have access to Google apps (including the Play Store).
- **Reset Child password:** If your child added a password to protect his profile, you can reset it by using this option.

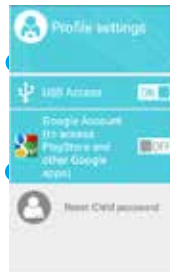


## Profiles menu

To access this menu, press the menu icon at the top left of the main menu.

- Create a new child profile.
- Delete the current child profile.
- Select another child profile if you created more than one.
- Access Parental account settings.

# Kurio Profile Interface

 - **Avatar:** The avatar can be modified from the Child's menu.
- **Categories:** Use the categories to find your different apps.
- **Favorites:** Drag and drop your favorite apps in the Favorites' tab.
- **Store:** Access directly the KIDOZ Store.
- **Kurio Genius:** Access the Kurio Genius app directly from your child profile with your parental password.
- **Switch user:** Use this app to switch to another profile quickly.
- **Updater:** Use this app to update, install or uninstall the tablet's preloaded apps with your parental password.
- **Child's menu:** Access the different options of the child profile's interface.

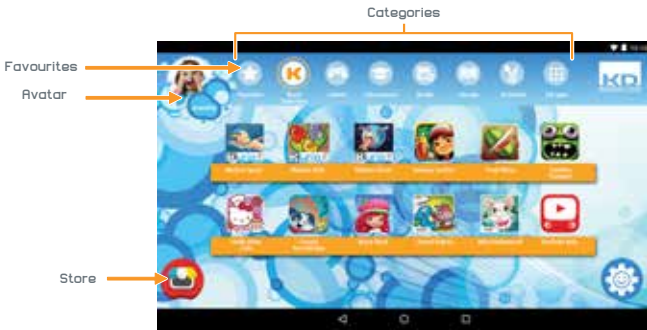

## Child's menu



- **Change my avatar:** Press here to select another avatar or to take a picture as the child profile's avatar.
- **Change my theme:** Press here to select another theme.
- **Change my wallpaper:** Press here to pick a new wallpaper or picture from the gallery.
- **Change my password:** Press here to create or modify the child profile's password.
- **Help:** Press here to read the help screens of the child profile.
- **Switch user:** Press here to log out from this profile and access another one.




# Kurio TAB 2

## Tech Support & Warranty Information

- If you have any questions setting up or using your tablet, please visit [www.kurioworld.com](http://www.kurioworld.com) to find out more about Kurio, read our FAQs, and for any technical support. All of our products have a 1 Year Limited Warranty. In the unlikely event you experience any problems with your Kurio, please visit [www.kurioworld.com/support/](http://www.kurioworld.com/support/) to contact Kurio Customer Care. You may also contact Customer Care through the Customer Care/Kurio Support applications on the device. If the service representative is unable to solve the issue, he or she will provide instructions regarding how to have your Kurio serviced if it is under warranty.
- Please note that this tablet is warranted only to the original purchaser for a period of twelve months from the original purchase date, under normal use and service, against defective workmanship and materials. If the product is damaged due to accident, improper or unreasonable use or maintenance, such as a broken screen, fall, water damage, etc., this damage is not covered by the warranty. Please still contact Kurio Customer Service for repair & replacement options, especially for a broken screen or other spare parts.
- Please visit [www.kurioworld.com](http://www.kurioworld.com) for the full details of Kurio's 1 Year Limited Warranty.

## Copyrights

© Alda Games, s.r.o. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by CIDE Interactive is under license. Other trademarks and trade names are those of their respective owners. Care Bears Create and Share © Budge Studios Inc. 2014. Care Bears™ Care Bears is a trademark of Those Characters From Cleveland, Inc. And American Greetings, Inc. Used under license by Budge Studios Inc. © 2014-2015 Budge Studios Inc. CronLab® is a CronLab Limited registered trademark Copyright © 2015 Farlex, Inc. © Frima Studio Inc. Android, Google Play and other marks are trademarks of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. Copyright © 2010, 2012, 2013, 2014, 2015 Halfbrick Studios. Halfbrick Studio and its logo are trademarks of Halfbrick Studios PTY LTD The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. Intel, Intel Atom and the Intel Inside logo are trademarks of Intel Corporation in the U.S. and/or other countries © 2010-2015, JoyBits Ltd. Copyright © 2013-2015 KD Productions™. All rights reserved. KD GROUP™, KD™, KD INTERACTIVE™, KURIO™, KD PRODUCTIONS™, the KD™ logo, the names, the graphics, the musics and brands mentioned on this product are registered trademarks of KD GROUP™, © Breakfirst © 2009-2015 KidsEmail © 2013 Sybo and Kileo. All rights reserved. CopyRight © 2013 Kingsoft Software. All rights reserved. Copyright © 2014 MagicFix Inc. © Magma Mobile. All right reserved TM & © 2015 Shortcake IP Holdings LLC or TM & © 2015 STRB © 2013 Miss Humblebee, LLC © Mobigame 2012-2015 © 2012-2015 MrNussbaum.com is a copyright of the Nussbaum Education Network, LLC. Copyright © 2014 PinpinTeam © Pkowl, Inc. Copyright © 2012. Genera Mobile. © '76, '88, '89, '90, '93, '96, '14 SANRIO MicroSDHC Logo is a trademark of SD-3C, LLC. © 2015 Studio Pango © 2015 Studio Balkin Copyright © 2013-2015 Toon Goggles, Inc © Yoursphere Media, Inc.



**Warning!** Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

For more information about Kurio, please go to [www.kurioworld.com](http://www.kurioworld.com) or contact:






Imported by:  
Kidz Delight, Ltd.  
1431 Opus Place Suite 110  
Downers Grove, Illinois  
IL 60515  
United States of America

 Made in China  
Printed in China

C15105US\_KDIUS\_AW\_UM\_01\_150716

## Tips and Recommendations

- While using some applications that use a lot of the device's processing capacity, the device may become warm. If this occurs, take a short break from using the device to let it cool down.
- Keep the unit clean by wiping it with a slightly damp cloth.
- If you encounter any charging issues, such as not fully charging or shutting off when it has a charge above 5%, you may need to reset the battery level indicator. Plug the unit into the power adapter, and then press and hold the POWER button until the tablet turns off. Continue to hold down the POWER button until the battery icon shows up again. Once it appears, release the POWER button and press it again to start the unit normally.
- The Kurio bumper protects your tablet in most cases, but is only intended to make the product more resistant to damage due to falls, bumps or other impact damages. Like any other electronic device, Kurio is fragile and despite the presence of the protective bumper, can break or be damaged from forces like dropping, banging, or being hit by other things. Please handle with care. Broken screens and touch panels are not covered by the warranty, and no bumper can prevent all damage.
- Due to Android 5.0's system management, it is no longer possible to move applications to an external SD card. We advise you to store all media files on an external SD card to keep free memory on the device's internal storage for apps and games.

 <p><b>WARNING</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></p> <p><b>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>		 <p>The lightning flash with arrow head within a triangle is intended to tell the user that parts inside the product constitute a risk of electric shock to people.</p>
 <p>The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the equipment.</p>		
<p><b>CAUTION: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. DO NOT PLACE ANY OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THIS APPARATUS.</b></p>		

- Do not damage or deform the power supply USB cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.
- The power adapter & cord should be plugged in near the unit, so it is easily accessible and does not strain the cord.

## Warning

- All packing materials such as internal bags, plastic collars, plastic films, screen protector film, and carton inserts are not part of this product and should be removed before handing the device over to a child. Please keep the box and this guide for further reference.
- Do not try to disassemble the unit.
- To charge Kurio, only use the power adapter supplied with Kurio tablet.
- Avoid using the tablet while charging: this may alter the battery charging process and the battery life of the device.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- To prevent hearing damage, never use earphones at excessive volume levels. Listening to loud sounds for an extended period may cause temporary or permanent hearing loss.
- Never use Kurio while operating a motor vehicle or bicycle.
- If you feel discomfort in your hands or any pain using Kurio, please stop immediately.
- In case of long period of use, take frequent breaks.
- If a small part is coming out of the Kurio, don't try to remove it. Keep it away from small children.
- Never force a connector into a port of Kurio. If a connector and a port do not join with reasonable force, make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.
- To clean up the screen, simply use a soft damp cloth. Do not use alcohol, solvent, aerosol spray or abrasive cleaners to clean your Kurio.
- The silicone bumper is designed to protect from light use and drops, but is not guaranteed to protect this delicate piece of electronics from severe drops, abuse, misuse, etc.
- The product and the adapter should be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to people and that, in an event of such conditions, the adapter should not be used until properly repaired.

## Exposure to Radio Frequency Energy

- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

For body worn operation, this product has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of [specified distance] from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This product has been tested and complies with this exposure limit. Please refer to the physical device for applicable FCC ID. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Restricted Use of Electronic Devices

The use of electronic/electric devices may interfere with safe operation of some aircraft and can be restricted with some airline companies. Please check with your airline company before traveling. Kurio has an Airplane Mode. Please go into the Settings of the Android Interface to switch the tablet into Airplane Mode. All wireless connections will be turned off.

## Declaration of Conformity

Kidz Delight, Ltd.  
1431 Opus Place Suite 110  
Downers Grove - Illinois - IL 60515  
United States of America  
Tel: 630 724 0223

Product: Kurio Motion  
Model: C15105

The undersigned does hereby declare that the product complies with the above Directives  
Xavier Ferrer-Piera  
General Manager



Issue date: May, 30th 2015

## Recycling



Waste electrical products and batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

**CAUTION - ELECTRICALLY OPERATED PRODUCT** - As with all electric products, precautions should be observed during handling and use to prevent electric shock. Rechargeable Lithium battery inside.

Adult supervision is recommended. Please retain this manual for further reference.

## Privacy Policy

We need you to provide us with your email address when activating your Kurio tablet and keep your email address up to date via the Parental Area to be informed of important updates and information. Your email address will never be shared with any third parties and you can unsubscribe at any time by clicking on the link provided at the bottom of every Kurio email. To read our Privacy Policy at any time, please go to [www.kurioworld.com](http://www.kurioworld.com).